

Stratus[®] ftServer[®] 2600, 4500, and 6300 Systems: Site Planning Guide

Stratus Technologies
R638-02

Notice

The information contained in this document is subject to change without notice.

UNLESS EXPRESSLY SET FORTH IN A WRITTEN AGREEMENT SIGNED BY AN AUTHORIZED REPRESENTATIVE OF STRATUS TECHNOLOGIES, STRATUS MAKES NO WARRANTY OR REPRESENTATION OF ANY KIND WITH RESPECT TO THE INFORMATION CONTAINED HEREIN, INCLUDING WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PURPOSE. Stratus Technologies assumes no responsibility or obligation of any kind for any errors contained herein or in connection with the furnishing, performance, or use of this document.

Software described in Stratus documents (a) is the property of Stratus Technologies Bermuda, Ltd. or the third party, (b) is furnished only under license, and (c) may be copied or used only as expressly permitted under the terms of the license.

Stratus documentation describes all supported features of the user interfaces and the application programming interfaces (API) developed by Stratus. Any undocumented features of these interfaces are intended solely for use by Stratus personnel and are subject to change without warning.

This document is protected by copyright. All rights are reserved. No part of this document may be copied, reproduced, or translated, either mechanically or electronically, without the prior written consent of Stratus Technologies. Stratus, the Stratus logo, ftServer, and the ftServer logo are registered trademarks of Stratus Technologies Bermuda, Ltd.

The Stratus Technologies logo, the Stratus 24 x 7 logo, ActiveService, ftScalable, and Active Upgrade are trademarks of Stratus Technologies Bermuda, Ltd.

The registered trademark Linux is used pursuant to a sublicense from the Linux Mark Institute, the exclusive licensee of Linus Torvalds, owner of the mark on a world-wide basis. FLEXIm is a registered trademark of Macrovision Corporation.

VMware, vSphere, ESX, and VMotion are registered trademarks or trademarks of VMware, Inc. in the United States and/or other jurisdictions.

All other trademarks are the property of their respective owners.

Manual Name: *Stratus ftServer 2600, 4500, and 6300 Systems: Site Planning Guide*

Part Number: R638

Revision Number: 02

Software Release Number: ftServer System Software for the Windows Operating System, Release 6.0.0

ftServer System Software for the Linux Operating System: Release 7.0.4

ftServer System Software for VMware vSphere: Release 3.0.0

Publication Date: February 2010

Stratus Technologies, Inc.

111 Powdermill Road

Maynard, Massachusetts 01754-3409

© 2010 Stratus Technologies Bermuda, Ltd. All rights reserved.

Fibre Channel Connections	4-2
Ethernet Cables	4-5
iSCSI Connections (VMware Systems)	4-7
Telephone Line Connections	4-8
Telephone Line Connections in Australia and New Zealand	4-8
Site Planning for Systems in an ftGateway Group	4-9

5. Rack Configuration Planning	5-1
Using PDUs	5-1
Determining PDU Requirements	5-2
Example of PDU Usage Calculation	5-4

6. Cabinet and Monitor Requirements	6-1
Cabinet Requirements	6-1
Monitor Requirements	6-5

Appendix A. System Specifications	A-1
System Specifications	A-1
PCI Adapter Specifications	A-7
AAP87600 PDU Specifications	A-8

Appendix B. Electrical Circuit and Wiring Information	B-1
Fault Protection Requirements	B-1
Grounding Considerations	B-1
Circuit Wiring Diagrams	B-2
Electrical Power Connectors	B-9

Appendix C. Standards Compliance	C-1
Electronic Interference, Immunity, Safety, and Noise Level	
Standards Compliance	C-1
Toxic and Hazardous Substances and Elements Disclosure	C-4
Guidelines for Airborne Contamination (Particulate and Gaseous)	C-4

Index	Index-1
--------------	---------

Figures

Figure 2-1.	System Connected Directly to AC Power	2-6
Figure 2-2.	PDUs Connected Directly to AC Power	2-7
Figure 2-3.	Power Cord Connections for Systems, PDUs, and a UPS	2-11
Figure 2-4.	Rack-Mountable Systems: A-Side Power Connected Directly to a UPS	2-12
Figure 4-1.	Fibre Channel Connections to an ftScalable Storage System Using Switches	4-4
Figure 4-2.	Direct-Attach Fibre Channel Connections to an ftScalable Storage System	4-4
Figure 6-1.	Rail Clearance	6-4
Figure A-1.	ftServer 2600, 4500, or 6300 System: CPU-I/O Enclosures: Front View	A-2
Figure A-2.	ftServer 2600, 4500, or 6300 System: Rear View	A-3
Figure A-3.	AAP87600 PDU	A-8
Figure B-1.	Star Ground Example	B-2
Figure B-2.	PDU Power Input Labeling	B-3
Figure B-3.	ftServer Enclosure Power Input Labeling	B-3
Figure B-4.	Single-Phase 120V AC Circuit Connection	B-4
Figure B-5.	Single-Phase 240V AC Circuit Connection	B-5
Figure B-6.	Split-Phase 120/240 Volts AC Circuit Connection	B-6
Figure B-7.	Three-Phase 208V AC, Y-, or D-Source Circuit Connection, Phase-to-Phase	B-7
Figure B-8.	Three-Phase 380V AC, Y-, or D-Source Circuit Connection, Phase-to-Neutral	B-8

Tables

Table 1-1.	Ethernet PCIe Adapters	1-4
Table 1-2.	ftServer 2600, 4500, and 6300 System Documentation	1-7
Table 1-3.	Additional System Documentation for Windows Systems	1-8
Table 1-4.	Additional System Documentation for Linux Systems	1-9
Table 1-5.	Additional System Documentation for VMware Systems	1-9
Table 2-1.	Worksheet: Determining A-Side Power Requirements	2-3
Table 2-2.	Worksheet: Determining B-Side Power Requirements	2-3
Table 2-3.	Worksheet: Determining External Power Requirements	2-4
Table 2-4.	HVAC Requirements	2-4
Table 2-5.	Worksheet: A-Side External Power Outlet Requirements: PDUs Used	2-4
Table 2-6.	Worksheet: B-Side External Power Outlet Requirements: PDUs Used	2-5
Table 2-7.	Worksheet: A-Side External Power Outlet Requirements: No PDUs	2-5
Table 2-8.	Worksheet: B-Side External Power Outlet Requirements: No PDUs	2-5
Table 2-9.	APC Symmetra Models for PDUs or for Multiple Systems	2-9
Table 2-10.	APC UPS Models for a Single Rack-Mountable System	2-9
Table 2-11.	Power Cords - ftServer Systems and Peripheral Components to AC Power	2-13
Table 2-12.	Power Cords Between ftServer Systems or Storage Systems and a UPS	2-14
Table 2-13.	Power Cords to Connect PDUs Directly to AC Power Mains	2-15
Table 2-14.	AC Power Cords to Connect PDUs to a UPS	2-15
Table 2-15.	System Power (<i>Jumper</i>) Cables to Connect ftServer Systems to PDUs	2-15
Table 4-1.	Optical Fibre Channel Cables	4-3
Table 4-2.	Customer-Supplied Ethernet Cables	4-6
Table 5-1.	Current and Rack-Space Requirements	5-2
Table 5-2.	Calculating A-Side PDU and Rack-Space Requirements	5-3
Table 5-3.	Example: Current and Rack-Space Requirements (208 volts)	5-4
Table 5-4.	Example: Calculating A-Side PDU and Rack-Space Requirements	5-4
Table A-1.	Cabinet Dimensions	A-4

Table A-2.	ftServer 2600, 4500, and 6300 System: CPU-I/O Enclosure Specifications	A-5
Table A-3.	PCI Adapter Specifications	A-7
Table A-4.	AAP87600 PDU: Specifications	A-9
Table B-1.	Connectors for AC Power Outlets	B-9
Table C-1.	Compliance Standards for ftServer 2600, 4500, and 6300 Systems (Class A)	C-2

Preface

The *Stratus ftServer 2600, 4500, and 6300 Systems: Site Planning Guide (R638)* documents the site requirements and customer responsibilities related to preparing a site for the installation of ftServer 2600, 4500, and 6300 systems.

This document is intended for those responsible for preparing a site for the installation of an ftServer 2600, 4500, or 6300 system.

Revision Information

This document is a revision. It adds the following information:

- Support for ftServer System Software for VMware® vSphere™, Release 3.0.0 throughout
- [A clarified warning](#)
- New compliance information in [Appendix C](#)
- Minor corrections throughout

Notation Conventions

This document uses the notation conventions described in this section.

Warnings, Cautions, and Notes

Warnings, cautions, and notes provide special information and have the following meanings:



WARNING _____

A warning indicates a situation where failure to take or avoid a specified action could cause bodily harm or loss of life.



CAUTION _____

A caution indicates a situation where failure to take or avoid a specified action could damage a hardware device, program, system, or data.

NOTE

A note provides important information about the operation of an ftServer system.

Typographical Conventions

The following typographical conventions are used in this document:

- The bold font emphasizes words in text or, in Microsoft Windows procedures, indicates text that you type, the name of a screen object, or the name of a programming element. For example:

Before handling or replacing system components, make sure that you are properly grounded by using a grounded wrist strap.

In the **System Properties** dialog box, click the **Hardware** tab.

Call the **RegisterDeviceNotification** function.

- The italic font introduces new terms and indicates programming and command-line arguments that the user supplies. For example:

Many hardware components are *customer-replaceable units* (CRUs), which can be replaced on-site by system administrators with minimal training or tools.

copy *filename1 filename2*

Pass a pointer for the *NotificationFilter* parameter

- The monospace font represents text that would appear on your display screen when working in a text-based console. The monospace bold font represents text you must type in examples that contain both user input and system output. The monospace italic font represents terms in command lines that are to be replaced by literal values. For example:

To display the state of a CPU enclosure on a Linux or VMware ESX™ system, type a command in the following format:

```
/opt/ft/bin/ftsmaint ls n
```

If you type **/opt/ft/bin/ftsmaint ls 0** at the prompt, the following output appears:

```
H/W Path : 0
Description : CPU Node Assembly
.
```

- The percent sign (%), dollar sign (\$), and number sign (#) are default prompt signs that have a specific meaning at a Linux or VMware ESX command prompt.

Although a prompt is sometimes shown at the beginning of a command line as it would appear on the screen, you do not type it.

- % or \$ indicates you are logged in to a standard user account and are subject to certain access limitations. The prompt displayed on the screen depends on your shell environment (for example, csh (%) or bash (\$)).
- # indicates you are logged in to the system administrator account and have superuser access. Users of this account are referred to as `root`. The # prompt sign used in an example indicates the command can be issued only by `root`.

Getting Help

If you have a technical question about ftServer system hardware or software, try these online resources first:

- **Online documentation at the StrataDOC Web site.** Stratus provides complimentary access to StrataDOC, an online-documentation service that enables you to view, search, download, and print customer documentation. You can access StrataDOC at the following Web site:

<http://stratadoc.stratus.com>

A copy of StrataDOC on supported media for your system is included with this release. To order additional copies of the StrataDOC media or to obtain copies of printed manuals, do one of the following:

- If you are in North America, call the Stratus Customer Assistance Center (CAC) at (800) 221-6588 or (800) 828-8513, 24 hours a day, 7 days a week.
 - If you are located outside North America, contact your nearest Stratus sales office, CAC office, or distributor; for CAC phone numbers outside the U.S., see <http://www.stratus.com/support/cac/index.htm>.
- **Online support from Stratus Customer Service.** You can find the latest technical information about an ftServer system through online product support at the Stratus Technical Support Web site:

<http://www.stratus.com/support/technics.htm>

- **Online product support for Microsoft® products.** Your primary source for support is the computer manufacturer who provided your software, or an authorized Microsoft Support Provider. You can also find the latest technical information about Microsoft Windows® and other Microsoft products through online product support at the [Microsoft Help and Support Web site](#):

<http://support.microsoft.com/>

- **Online product support for Red Hat® Linux® products.** Your primary source for support is the manufacturer who provided your software, or Red Hat Global Support Services. You can also find the latest technical information about Red Hat Enterprise and Standard Linux through online product support at the Red Hat Support Web site:

<http://www.redhat.com/apps/support/>

- **Online product support for VMware® vSphere™ products.** You can find the latest technical information about VMware vSphere through online product support at the VMware Support Web site:

<http://www.vmware.com/support/>

If you are unable to resolve your questions with the help available at these online sites, and the ftServer system is covered by a service agreement, please contact the Stratus Customer Assistance Center (CAC) or your authorized Stratus service representative. For information about how to contact the CAC, see the following Web site:

<http://www.stratus.com/support/cac/>

Commenting on the Documentation

To provide corrections and suggestions on the documentation, send your comments in one of the following ways:

- By clicking the **site feedback** link at the bottom of a Help topic. Information to identify the topic is supplied in the StrataDOC Web Site Feedback form.
- By email to Comments@stratus.com. If it is possible, please include specific information about the documentation on which you are commenting:
 - For a printed document or a document in PDF format, include the title and part number from the Notice page and the page numbers.
 - For online documentation, include the Help subject and topic title.

This information will assist Stratus Information Development in making any needed changes to the ftServer system documentation. Your assistance is most appreciated.

Regulatory Notice

This document contains all regulatory notices that apply to your ftServer 2600, 4500, or 6300 system.

Chapter 1

Site Planning for ftServer 2600, 4500, and 6300 Systems

For an overview of required information and tasks you need to perform to prepare a site for ftServer 2600, 4500, and 6300 systems, see:

- [“Site Planning Overview” on page 1-1](#)
- [“Site Planning for Fault-Tolerant Systems” on page 1-3](#)
- [“Site Planning Checklist” on page 1-3](#)
- [“System Documentation” on page 1-7](#)
- [“Safety Notices” on page 1-10](#)

Site Planning Overview

[Site planning for fault-tolerant systems](#) includes:

- [Purchasing an appropriate cabinet and monitor](#)

If you do not purchase a monitor from Stratus, provide a monitor that meets the system’s requirements.

NOTE _____

A monitor, keyboard, and mouse are required to install ftServer System Software (ftSSS).

If you do not purchase a cabinet from Stratus, provide a cabinet that meets the system’s requirements.

- [Electrical power planning](#)

Provide electrical power sources that meet the requirements of the system and optional components, optionally including the purchase of a qualified [uninterruptible power supply \(UPS\)](#).

- **Space planning**

Provide adequate space for the system or cabinet and for a desk or table to accommodate components outside a cabinet. Also provide enough space for servicing the systems and components.

Provide an environment that meets the system's requirements for ambient temperature and air quality.

- **Communications line planning**

Provide sufficient network and analog telephone lines and plan the location of the system and external components to accommodate the lengths of the connecting cables.

- **Rack space planning**

Ensure that the power distribution units (PDUs) supply sufficient power to the components you have purchased and that you have sufficient space available in an appropriate cabinet.

Use the “[Site Planning Checklist](#)” on page 1-3 to track your site preparation progress.

For information about obtaining documents related to your ftServer system, see “[System Documentation](#)” on page 1-7.

During the site planning and preparation processes, work closely with your facilities group or contractor to determine space, power, and environmental requirements. Enlist their help to provide a suitable location with sufficient alternating current (AC) power, heating, ventilation and air conditioning (HVAC) capabilities, and network and telephone connections.

If your system is covered by a service agreement and you need help with site planning, contact the Stratus Customer Assistance Center (CAC) or your authorized Stratus service representative. If you have a contract with the CAC or your authorized Stratus service representative to install the system, contact them after you have prepared the installation site and moved the system to the site. For more information about the CAC, see [Getting Help](#) in the Preface or the <http://www.stratus.com/support/cac/> Web site.

See [Appendix A, “System Specifications”](#) for the specifications of the base ftServer systems and of PDUs. See the *Stratus ftServer Systems: Peripherals Site Planning Guide* (R582) for specifications of other components.

Site Planning for Fault-Tolerant Systems

Consider the following specific fault-tolerant features of ftServer systems for site planning:

- Lockstep technology means that the systems contain redundant hardware. The systems contain two enclosures, each containing a full computing environment that consists of a CPU element and an I/O element.

If a component in a CPU element malfunctions, the corresponding CPU element in the other enclosure, which is processing the same information in lockstep, continues processing without interruption. If a component in the I/O element malfunctions, the system fails operation over to the corresponding element in the other enclosure and continues to operate normally. The only consequences are that the system is less fault tolerant, and any I/O throughput distributed between the enclosures may be reduced. To restore full fault tolerance, an enclosure can be replaced without taking the system offline.

- ftServer systems can connect to the ActiveService Network (ASN).

Connecting a system to the ASN allows the CAC or your authorized Stratus service representative to remotely diagnose, troubleshoot, and resolve problems online.

To enable connectivity to the ASN, an ASN modem can be attached directly to the system. Two partnered Virtual Technician Modules (VTMs) manage the modem. The VTMs can also connect to the ASN through their Ethernet ports, if the network to which they are attached has Internet access. Systems without modems can connect to the ASN through an Internet connection.

Systems that connect to the ASN using partnered VTMs provide the highest level of availability. VTMs provide ASN connectivity even when the operating system is not operational. VTMs also allow internal administrators to remotely service the system over a telephone line or IP network, regardless of the state of the operating system.

Site Planning Checklist

Referring to the information in this document, answer the following questions:

Planning for ASN Connectivity

- Will your system connect to the ASN? If so, will it connect over an ASN modem or the Internet?
- If your system will use the Internet to connect to the ASN, do you have an Internet connection available?
- If your system will use an ASN modem, do you have an external analog telephone line available for the ASN modem?

NOTE _____

A dedicated phone line provides the most reliable service. ASN calls routed through a PBX may be slow due to load on the PBX, or may not complete successfully due to disconnections. If you must use a PBX, do not route the telephone extension through a switchboard; instead, provide a direct-dial analog number.

- Do you have an additional telephone connection and telephone near the operator’s station for voice communications when calling for support?

Planning for Network Connectivity

- The system contains four embedded 10/100/1000 megabits-per-second (Mbps) Ethernet ports. You can add optional Ethernet PCI adapters to provide additional Ethernet bandwidth. Will your system additionally include any of the following PCI adapters? If so, in [Table 1-1](#), indicate the total number of ports, and plan network connections for all Ethernet ports you will use.

Table 1-1. Ethernet PCIe Adapters

Adapter	Total Number of Ports
Embedded Dual-Port 10/100/1000 Base-T Ethernet PCI-Express Adapters (2)	4
U104 Dual-Port Fiber Gigabit Ethernet PCI-Express Adapter	
U105 Dual-Port 10/100/1000 Base-T Ethernet PCI-Express Adapter	
†U108 Single-Port Fiber 10-Gigabit Ethernet PCI-Express Adapter (Linux systems only)	

† Contact your Stratus account team for information on availability of this product.

NOTE _____

The combined four ports of the two embedded physical adapters provide the basic requirements for VMware ESX software: one port of each adapter dedicated to the service console and the other port of each adapter dedicated to the virtual machines or VMkernel traffic.

Planning for External Storage Options

- Will your system connect to external Fibre Channel storage enclosures? If so, the system requires a pair of Fibre Channel HBAs, which are provided when you order

the storage enclosure. If you order the enclosure at the same time you order the system, the required Fibre Channel HBAs are installed at the factory. See the *Stratus ftServer Systems: Peripherals Site Planning Guide (R582)* for descriptions of the storage enclosures provided by Stratus and the names of the PCI adapters required for supported storage enclosures.

NOTE _____

ftServer systems support ftScalable™ Storage systems, and EMC® CLARiiON® or Symmetrix® storage systems.

If you plan to connect an EMC storage system to an ftServer system running the Linux operating system, ensure that you have received approval for your configuration by submitting a request through EMC's Request for Price Quote (RPQ) process to guarantee EMC support.

- Will your system connect to external Fibre Channel storage enclosures in a storage area network (SAN) configuration? If so, do you have a minimum of two switches that can accommodate the cables from the pair of Fibre Channel HBAs in each ftServer system?

NOTE _____

Stratus has successfully tested the Brocade® 200E and 5100 Fibre Channel switches. Other model switches may also be compatible as long as they can be configured in the same manner as the Brocade 200E or 5100 switch.

- Will your ftServer system running VMware ESX connect to external iSCSI storage enclosures? If so, ensure that your system has adequate Ethernet adapter bandwidth. Contact your account representative for information about iSCSI storage systems qualified for use with ftServer systems.

Planning for Optional Components

- Will you supply your own monitor or will Stratus supply the monitor, keyboard, and mouse? Is the monitor rack-mountable or do you need to provide a table or desk?
- Will you connect an SAS tape drive to your system?

NOTE _____

ftSSS for VMware vSphere does not support tape drives.

Planning AC Power

- Will you provide power to both sides of the system through a pair of PDUs?

- If your system is running the Windows operating system, will you protect the system power with a UPS?
- What optional components will you use?
- What are the AC power requirements of your system, including all optional components?
- What are the lengths and types of the power cords that are provided for the PDUs or system, and optional components?
- What type of AC receptacles do you need to provide?
- Is the AC power service wired properly?

Planning Space for Your System

- Will your system and its external components fit where you plan to place them?
- What is the height of the cabinet you will use, and what is the total height of the systems and components that will be installed in the cabinet? Will the items fit into the cabinet? What components will be located outside the cabinet?
- What are the lengths and types of the interface and communications cables that will connect to your system?
- Have you created a sketch of how you plan to arrange the system at the installation site? Consider the available cable lengths, the placement of external devices, and the location of network and voice communication connections.

On the sketch, show the following:

- Location of the system and its external components
- Power cords, and telephone and interface cables
- Locations of AC power receptacles, phone jacks, Ethernet jacks, switches, and hubs

NOTE _____

Make sure that all cords and cables are long enough to reach between their respective components and connectors. Route all cables out of the way of foot traffic.

Working with Other Groups

- Have you provided your facilities group and contractors with the sketch of how you plan to arrange the system and copies of the following?
 - [“AC Power and HVAC Service Requirements” on page 2-2](#)
 - [“Redundant Power Sources” on page 2-1](#)
 - Tables [2-1](#), [2-2](#), and [2-3](#), worksheets for determining AC power requirements

- Tables [2-5](#) and [2-6](#) (if you are using PDUs) or Tables [2-7](#) and [2-8](#) (if you are not using PDUs), worksheets for determining the number of external power outlets required
 - [Appendix B, “Electrical Circuit and Wiring Information”](#)
 - Any notes you have about site planning
- Have you reviewed and discussed the requirements with the facilities personnel and contractors to ensure that all site modifications are understood and implemented?

If you have any questions about the number and types of components, contact your Stratus account representative or distributor.

System Documentation

[Table 1-2](#) lists the hardware documents for ftServer 2600, 4500, and 6300 systems, and the tasks described in each document. Also see [Table 1-3](#) (for Windows systems) or [Table 1-4](#) (for Linux systems) or [Table 1-5](#) (for VMware ESX systems).

Table 1-2. ftServer 2600, 4500, and 6300 System Documentation

Document	Task
<i>Stratus ActiveService Network Configuration Guide (R072)</i>	Configure your system for support by the ASN
<i>Stratus ftServer Systems: PCI Adapter Guide (R461)</i>	Install, configure, replace, or troubleshoot PCI adapters
<i>Stratus ftServer Systems: Technical Reference Guide (R550)</i>	Consult technical reference information for ftServer systems
	Change BIOS settings in the ftServer Setup program
<i>Stratus ftServer Systems: Peripherals Site Planning Guide (R582)</i>	Find information about optional equipment that you have ordered with your system that is needed to complete site preparation
<i>Stratus ftServer 2600, 4500, and 6300 Systems: Operation and Maintenance Guide (R639)</i>	Start up, shut down, and operate your system
	Troubleshoot system hardware
	Remove and replace CRUs, including PCI adapters
<i>Stratus ftServer 2600, 4500, and 6300 Systems: Hardware Installation Guide (R640)</i>	Install your system, including mounting the system in a cabinet

Table 1-2. ftServer 2600, 4500, and 6300 System Documentation (Continued)

Document	Task
<i>Unpacking Stratus ftServer 2600, 4500, and 6300 Systems</i> (R641)	Inspect and unpack ftServer system hardware that you install in your cabinet

[Table 1-3](#) lists additional documents for ftServer 2600, 4500, and 6300 systems that run ftSSS for the Windows operating system, and the tasks described in each document.

Table 1-3. Additional System Documentation for Windows Systems

Document	Task
<i>Release Notes: Stratus ftServer System Software for the Windows Operating System</i> (R004W)	<p>Learn the contents of the latest ftServer System Software release</p> <p>Learn the latest information about the product</p> <p>Learn about significant known problems and how to work around or avoid the problems</p>
<i>Stratus ftServer System Software: Installation and Configuration for Windows Systems</i> (R002W)	<p>Respond to Mini-Setup questions</p> <p>Install or reinstall ftSSS and Windows Server software</p> <p>Install the operating system on your new system</p> <p>Upgrade software and BIOS, BMC, and VTM firmware</p> <p>Configure ftSSS</p> <p>Set up your system to communicate with a UPS</p> <p>Configure VTMs</p>
<i>Stratus ftServer System Administrator's Guide for the Windows Operating System</i> (R014W)	<p>Use tools that are provided by the operating system software, ftServer System Software, and other vendors to manage and troubleshoot the system</p> <p>Manage data-storage devices</p>
<i>Stratus ftServer Virtual Technician Module User's Guide</i> (R642)	Use the VTM console to remotely control, monitor, and troubleshoot your system

[Table 1-4](#) lists additional documents for ftServer 2600, 4500, and 6300 systems that run ftSSS for the Linux operating system, and the tasks described in each document.

Table 1-4. Additional System Documentation for Linux Systems

Document	Task
<i>Release Notes: Stratus ftServer System Software for the Linux Operating System (R005L)</i>	<p>Learn the contents of the latest ftServer System Software release</p> <p>Learn the latest information about the product</p> <p>Learn about significant known problems and how to work around or avoid the problems</p>
<i>Stratus ftServer System Software: Installation for Linux Systems (R013L)</i>	Install and update the Linux operating system, ftServer System Software, and BIOS and BMC firmware
<i>Stratus ftServer System Administrator's Guide for the Linux Operating System (R003L)</i>	<p>Use tools that are provided by the operating system software, ftServer System Software, and other vendors to manage and troubleshoot the system</p> <p>Manage network connections and data storage devices</p> <p>Install and configure the Simple Network Management Protocol</p>
<i>Stratus ftServer Virtual Technician Module User's Guide (R642)</i>	Use the VTM console to remotely control, monitor, and troubleshoot your system

[Table 1-5](#) lists additional documents for ftServer 4500 and 6300 systems that run ftSSS for VMware vSphere, and the tasks described in each document.

Table 1-5. Additional System Documentation for VMware Systems

Document	Task
<i>Release Notes: Stratus ftServer System Software for VMware vSphere (R001E)</i>	<p>Learn the contents of the latest ftServer System Software release</p> <p>Learn the latest information about the product</p> <p>Learn about significant known problems and how to work around or avoid the problems</p>
<i>Stratus ftServer System Software: Installation and Configuration for VMware vSphere Systems (R004E)</i>	Install, update, and configure VMware ESX, ftServer System Software, and BIOS and BMC firmware.

Table 1-5. Additional System Documentation for VMware Systems (Continued)

Document	Task
<i>Stratus ftServer System Administrator's Guide for VMware vSphere (R002E)</i>	Use tools that are provided by VMware vSphere, ftServer System Software, and other vendors to manage and troubleshoot the system Manage data storage devices
<i>Stratus ftServer Virtual Technician Module User's Guide (R642)</i>	Use the VTM console to remotely control, monitor, and troubleshoot your system
<i>VMware iSCSI SAN Configuration Guide</i> [†]	Learn how to set up and manage a system using VMware vSphere with external iSCSI storage systems
<i>VMware Fibre Channel SAN Configuration Guide</i> [†]	Learn how to set up and manage a system using VMware vSphere with Fibre Channel storage area networks (SANs)

† Available from VMware at <http://www.vmware.com/support/pubs/>.

Safety Notices



WARNING

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions provided with the battery.



WARNING

The system uses two power cords to provide redundant sources of power. To fully remove power from a system, disconnect both power cords. To reduce the risk that electrical shock could injure a person or damage the system, exercise caution when working in the unit even when only one power cord is connected.



WARNING

To prevent a cabinet from tipping over and injuring a person or damaging the system, start installing systems from the bottom of the cabinet upward.

**WARNING** _____

If you replace the modem cable supplied by Stratus, use a cable with a gauge of at least 26 AWG to prevent fire.

**WARNING** _____

To avoid fire, electric shock, and equipment breakdown, prevent water or foreign objects from getting into the equipment. Do not let water or foreign objects, such as pins or paper clips, enter the equipment.

**WARNING** _____

To prevent fire or current leakage, do not plug the power cord into a nonconforming outlet. Use a power outlet with appropriate voltage and power type, as specified in this guide.

**WARNING** _____

Do not install the equipment where you may need an extension cord. Use of an extension cord that does not meet the power specifications introduces a risk of overheating that could lead to a fire.

**WARNING** _____

Disconnect the power cords from the server or power source before you install or relocate the equipment. All voltage is removed only when the power cords are disconnected.



WARNING _____

Do not install or store the equipment in an unsuitable place. Install or store the equipment in a place that meets the requirements specified in this guide. Avoid the following conditions to avoid the risk of fire:

- **Dust**
- **High humidity, such as a place near a boiler**
- **Direct sunlight**
- **Instability, such as places not stabilized against earthquakes**



WARNING _____

Do not use or store this product in a corrosive environment.

Avoid using or storing this product in an environment which may contain corrosive gases. Such gases include, but are not limited to, sulfur dioxide, hydrogen sulfide, nitrogen dioxide, chlorine, ammonia or ozone.

Avoid installing this product in a dusty environment or one that may contain corrosive materials such as sodium chloride or sulfur.

Avoid installing this product in an environment which may contain excessive metal flakes or conductive particles in the air.

Such environments may cause corrosion or short circuits within this product, resulting in not only damage to this product, but also fire.

If there are any concerns regarding the environment at the planned site of installation or storage, please contact your CAC or your authorized Stratus service representative.

**WARNING** _____

When installing a system or CRU, always connect the power cord first, before adding communications cables. The power cord contains the protective earth connection; it should be connected first and disconnected last, to maintain a grounded chassis.

Before attempting to remove a CRU from the system chassis, make sure to power off the CRU, disconnect communications cables, and then disconnect the power cord.

Never connect a power cord to a CRU when it is not located within the system chassis.

**WARNING** _____

Do not disassemble, repair, or alter the server, except as described in the *Stratus ftServer 2600, 4500, and 6300 Systems: Operation and Maintenance Guide* (R639). There is a risk of an electric shock or fire as well as equipment malfunction if you do not observe the instructions in the *Stratus ftServer 2600, 4500, and 6300 Systems: Operation and Maintenance Guide* (R639).

**WARNING** _____

Do not place any object on top of the server. The object may fall off and cause injuries, damage to hardware, or a fire.

**WARNING** _____

Do not leave the DVD tray ejected. Dust may enter the equipment and cause it to malfunction. The ejected tray may also become a cause of injuries.

安全注意事項



WARNING

若錯誤更換電池類型，將產生爆炸風險。請按電池包裝說明，妥善丟棄已耗廢電池。



WARNING

系統採用兩條電源線，以提供冗餘電源。欲徹底清除系統電源，先拔下兩條電源線。為降低觸電所導致的人體傷害或系統損害，請小心操作機體，即使系統僅插入一條電源線。



WARNING

欲預防儲櫃翻倒，進而導致人體傷害或系統損害，請從儲櫃下方開始往上安裝系統。



WARNING

若您更換由Stratus供應的數據機纜線，請使用至少有26 AVG壓力的纜線，避免發生火災。



WARNING

避免火災、觸電、設備故障、液體或其他異物進入設備。不得讓液體或類似圖釘或迴紋針等異物進入設備。



WARNING

為避免火災或漏電，不得將電源線插入規格不符的的插座中。請使用本指南指定之電壓及電源類別的的插座。

**WARNING**

不得使用延長線安裝設備。使用與指定電源規格不符的延長線會產生設備過熱風險，進而可能導致火災。

**WARNING**

安裝或移動設備前，請從伺服器或電源拔下電源插頭。

只有在拔下電源線後，設備的所有電壓才會消除。

**WARNING**

不得在不適合場所安裝或存放設備。請按本指南指定且符合規格要求的場所安裝或存放設備。避免下列可能產生火災風險的地方：

灰塵較多

熱水器旁濕氣較重的地方

陽光直照的地方

不穩位置，例如易受地震影響的地方

**WARNING**

不得在腐蝕性環境中使用或存放產品。避免在含腐蝕性氣體的環境使用或存放本產品，其中包括但不限於：二氧化硫、硫化氫、氯、氫、氨或臭氧。

不得將本產品安裝在灰塵較多或含類似氯化鈉或硫磺等腐蝕性物質的地方。

不得將本產品安裝在空氣中含過量金屬碎片或傳導粒子的地方。

上述環境可能導致本產品腐蝕或短路，因而損壞產品，甚至引起火災。若對產品安裝或存放的場地環境規劃有任何疑問，請與CAC或授權Stratus服務代表聯絡。



WARNING

不得在伺服器已連接電源的狀態下連接界面電纜。安裝或移除任何內建裝置，或從伺服器拔下或連接任何界面電纜前，確認已關閉伺服器的電源，並從伺服器或電插座拔下電纜線。即使伺服器電源已切斷，在仍連接電源的狀態下，碰觸內建裝置、電纜或連接器也可能產生觸電、或因短路而引起火災。



WARNING

除 *Stratus ftServer 2600*、*4500* 和 *6300* 系統：操作和維修指南 (R639) 之說明外，不得以任何方式拆卸、修理或改裝伺服器。若未遵循 *Stratus ftServer 2600*、*4500* 和 *6300* 系統：操作和維修指南 (R639) 的說明指示，將可能產生觸電、火災以及設備故障的風險。



WARNING

不得在伺服器上放置任何物件。物件可能會掉落而導致人體傷害、硬體損壞或火災。



WARNING

DVD 光碟機不得靜置於彈出位置。灰塵進入設備將導致功能異常。彈出的光碟也可能是導致設備損壞的來源。

Chapter 2

Electrical Power Planning

For information about planning appropriate AC electrical power for your system and its peripheral components, see:

- [“Redundant Power Sources” on page 2-1](#)
- [“AC Power and HVAC Service Requirements” on page 2-2](#)
- [“Selecting a UPS Unit for ftServer Systems” on page 2-8](#)
- [“Power Cord Summary” on page 2-13](#)
- [“Grounding Requirements” on page 2-15](#)

Related Topic

- [Chapter 5, “Rack Configuration Planning”](#)

Redundant Power Sources

ftServer systems require at least two separate and independent AC power sources—an *A-side* power source and a *B-side* power source—that provide power to the system’s power receptacles, labeled A and B, respectively. Either source must be capable of continuing to provide power if power to the other source is lost.

The A-side power source provides power to one side of each system and storage enclosure, as well as to components that do not require two sources of power, such as tape-drive enclosures and a monitor. If you use an uninterruptible power supply (UPS), the UPS is, in these standard, documented, configurations, the A-side power source.

The B-side power source provides power to the other side of each system and storage enclosure.

The wattage required from the A-side power source will always be equal to or greater than the wattage required from the B-side power source.

AC Power and HVAC Service Requirements

From the *Stratus ftServer Systems: Peripherals Site Planning Guide* (R582), obtain the nominal input line voltage (volts AC) and frequency (Hz) required for optional, AC-powered components. In general, provide 100–127 VAC or 200–240 VAC at 50 or 60 Hz for optional components. PDUs require 200–240 VAC at 50 or 60 Hz. Operating the system at the higher end of the voltage range, when possible, results in higher power system efficiency and consequently less generated heat and lower utility costs.

For detailed information about the plug types and lengths of the power cords provided with the system, see [“Power Cord Summary” on page 2-13](#).

The power service must be properly wired and grounded according to local standards and regulations. See [Appendix B, “Electrical Circuit and Wiring Information”](#) for more information.

NOTE

A branch circuit breaker with ground fault protection must allow a minimum of 3.5 milliamperes (mA) leakage current for each power cord.

Use the following worksheets to determine AC power requirements for the site.

- In [Table 2-1](#), determine the power requirements at the A-side power source.
- In [Table 2-2](#), determine the power requirements at the B-side power source.
- In [Table 2-3](#), determine the power requirements for components outside of the cabinet. These components can share a power source with the A-side or B-side components.
- In [Table 2-4](#), determine the related HVAC requirements.

To determine AC power requirements

Provide information in [Tables 2-1](#), [2-2](#), and [2-3](#) as follows:

1. In the Quantity column, write the number of each type of component.
2. Multiply the entry in the Quantity column by the number in the Watts column, and enter the result in the Watts Subtotal column.
3. Add the values in the Watts Subtotal column, and enter the sum on the bottom line. This value indicates the maximum power requirement for each power source.

Table 2-1. Worksheet: Determining A-Side Power Requirements

System Component	Quantity	Watts	Watts Subtotal
ftServer systems		x 700	
Monitor unit [†]		x	
Storage enclosure [‡]		x	
Fibre Channel switch [‡]		x	
User-supplied components			
TOTAL A-SIDE POWER REQUIREMENTS			

[†] See the *Stratus ftServer Systems: Peripherals Site Planning Guide* (R582) for the wattage of optional components you purchase from Stratus.

[‡] If you are using Fibre Channel switches to connect the systems to storage enclosures, include on this line the power requirements for a Fibre Channel switch. Two switches are required for fault-tolerant operation. Connect one switch to A-side power and the other switch to B-side power.

Table 2-2. Worksheet: Determining B-Side Power Requirements

System Component	Quantity	Watts	Watts Subtotal
ftServer systems		x 700	
Storage enclosure [†]		x	
Fibre Channel switch [‡]		x	
User-supplied components			
TOTAL B-SIDE POWER REQUIREMENTS			

[†] See the *Stratus ftServer Systems: Peripherals Site Planning Guide* (R582) for the wattage of optional components you purchase from Stratus.

[‡] If you are using Fibre Channel switches to connect the systems to storage enclosures, include on this line the power requirements for a Fibre Channel switch. Two switches are required for fault-tolerant operation. Connect one switch to A-side power and the other switch to B-side power.

Table 2-3. Worksheet: Determining External Power Requirements

System Component	Watts
Other peripheral components	
TOTAL EXTERNAL POWER REQUIREMENTS	

To determine HVAC requirements

1. Add together the values from the Total row of Tables 2-1, 2-2, and 2-3 and enter the value in the Total Watts column of Table 2-4.
2. Multiply the value in the Total Watts column by 3.41 and enter the number of BTUs in the BTUs/hr. Subtotal column.

Table 2-4. HVAC Requirements

Total Watts (From Tables 2-1, 2-2, and 2-3)	Convert to BTUs	BTUs/hr. Subtotal
	x 3.41 =	

AC Power Outlet Requirements

If you **do** use a pair of PDUs in the cabinet, use Tables 2-5 and 2-6 to determine the total number of power outlets required **outside the cabinet**.

1. In the Quantity column, write the number of each type of component.
2. Multiply the value in the Quantity column by the value in the Outlets column, and enter the total in the Subtotal column.
3. Add the values in the Subtotal column and enter the sum next to TOTAL NUMBER OF A-SIDE POWER OUTLETS and TOTAL NUMBER OF B-SIDE POWER OUTLETS.

Table 2-5. Worksheet: A-Side External Power Outlet Requirements: PDUs Used

Component	Quantity		Outlets	Subtotal
PDUs		x	1	
Other external components				
TOTAL NUMBER OF A-SIDE POWER OUTLETS				

Table 2-6. Worksheet: B-Side External Power Outlet Requirements: PDUs Used

Component	Quantity		Outlets	Subtotal
PDUs		x	1	
Other external components				
TOTAL NUMBER OF B-SIDE POWER OUTLETS				

If you do **not** use PDUs in the cabinet, use Tables 2-7 and 2-8 to determine the number of AC power outlets required **outside the cabinet**.

1. In the Quantity column, write the number of each type of component.
2. Multiply the value in the Quantity column by the value in the Outlets column, and enter the total in the Subtotal column.
3. Add the values in the Subtotal column and enter the sum next to TOTAL NUMBER OF A-SIDE POWER OUTLETS and TOTAL NUMBER OF B-SIDE POWER OUTLETS.

Table 2-7. Worksheet: A-Side External Power Outlet Requirements: No PDUs

Component	Quantity		Outlets	Subtotal
ftServer systems		x	1	
Storage enclosures		x	1	
LCD monitor units or external monitors		x	1	
Tape-drive enclosure		x	1	
Other peripheral components				
TOTAL NUMBER OF A-SIDE POWER OUTLETS				

Table 2-8. Worksheet: B-Side External Power Outlet Requirements: No PDUs

Component	Quantity		Outlets	Subtotal
ftServer systems		x	1	
Storage enclosures		x	1	
Other peripheral components				
TOTAL NUMBER OF B-SIDE POWER OUTLETS				


Connecting a System Directly to Separate AC Sources

If you do not connect your ftServer system or PDUs to a UPS, provide two AC power sources that are as electrically independent of each other as the installation site allows.

At a minimum, the two power sources must be powered by separate circuit breakers (maximum of 20A) to AC power and, if possible, be independent of each other beyond that level. The more electrical separation between the two power sources, the less likely they will both fail at the same time. Due to redundancy in ftServer systems, power to either side of the system keeps the system in operation, although the system is no longer fault-tolerant with regard to power.

Figure 2-1 shows how to connect rack-mounted ftServer 2600, 4500, and 6300 systems directly to two separate AC power sources. Figure 2-2 shows how to connect PDUs directly to two separate power sources.


Figure 2-1. System Connected Directly to AC Power

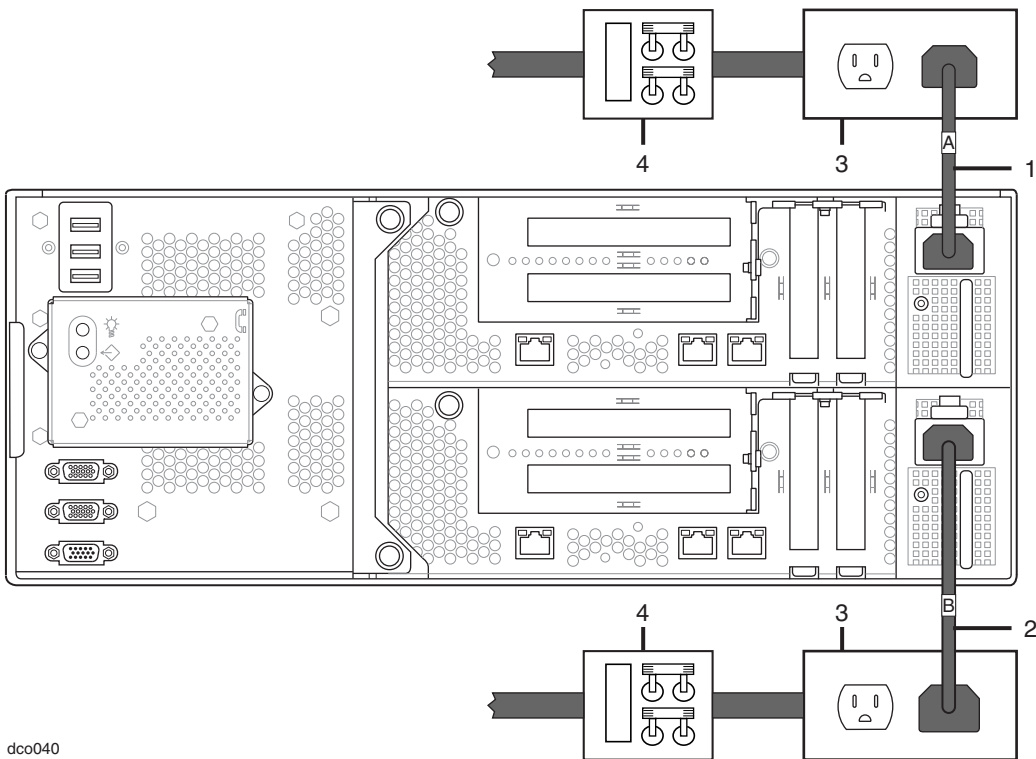

dco040

- | | | | |
|---|-------------------|---|-----------------------------------|
| 1 | A-side power cord | 3 | AC power outlets |
| 2 | B-side power cord | 4 | Circuit breakers (maximum of 20A) |

Figure 2-2. PDUs Connected Directly to AC Power

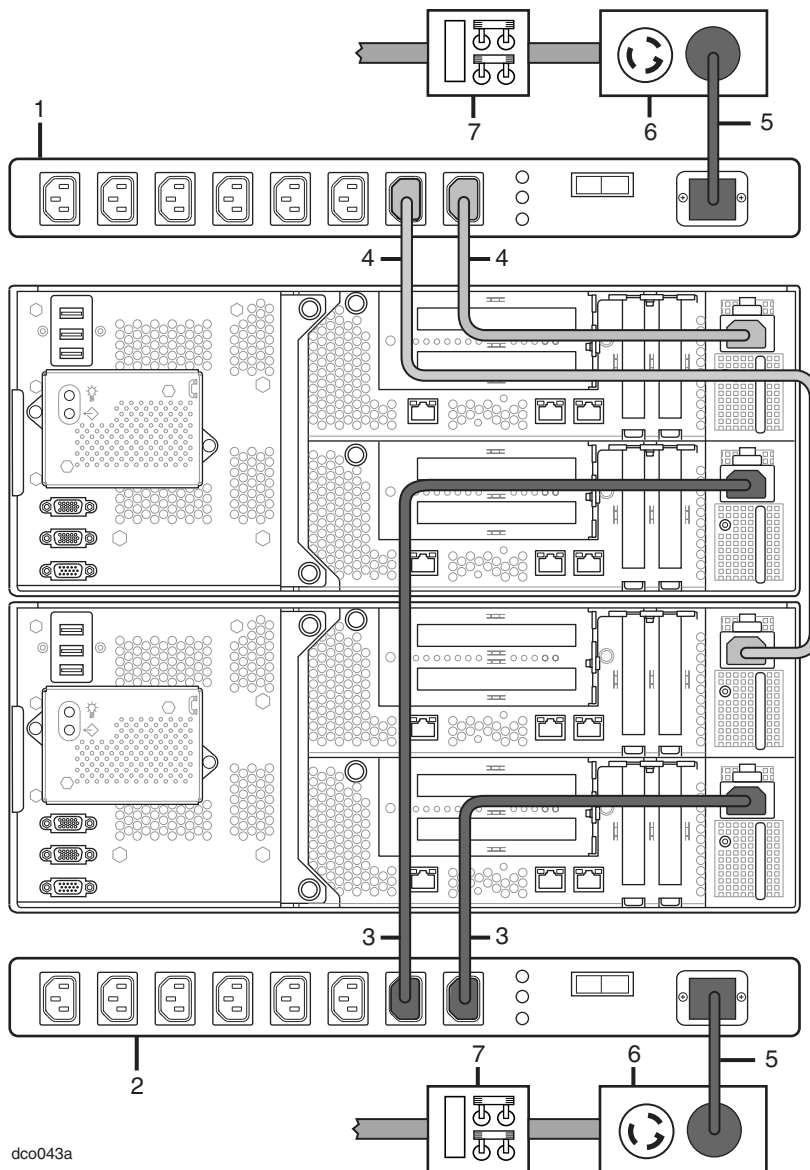

dco043a

- | | | | |
|---|----------------------|---|-----------------------------------|
| 1 | A-side PDU | 5 | PDU power cords |
| 2 | B-side PDU | 6 | AC power outlets |
| 3 | B-side jumper cables | 7 | Circuit breakers (maximum of 20A) |
| 4 | A-side jumper cables | | |

Selecting a UPS Unit for ftServer Systems

Stratus does not sell or service UPS units. However, Stratus has qualified UPS models for use with ftServer 2600, 4500, and 6300 systems.

Use [Table 2-1](#) to determine the number ofwatts the A-side of your system requires and use [Table 2-9](#) and [2-10](#) to select a UPS model.

NOTE

Generally, system fault tolerance could be at risk if you use a UPS with systems that run ftSSS for VMware vSphere or ftSSS for the Linux operating system. These versions of ftSSS do not include the logic to decide whether the operating system should shut down in response to certain signals from the UPS, and the UPS may unnecessarily shut down the system.

If you have a situation that requires the use of a UPS (for example, if you do not have two separate power sources at the installation site), use the tables in this section to select an appropriate UPS, do **not** use UPS signaling, and contact the CAC or your authorized Stratus service representative for additional assistance.

NOTE

Site planning information for the UPS in this document is of a general nature only. Do not rely exclusively on the UPS information in this document. [Contact APC](#) at <http://www.apcc.com> for detailed UPS specifications, documentation, sizing, and ordering information.

Table 2-9. APC Symmetra Models for PDUs or for Multiple Systems

Locale	APC Symmetra Model	UPS Input	UPS Output
North America	SYH2K6RMT, SYH4K6RMT, SYH6K6RMT Requires AAP87600 PDU with B50171F power cord	208V	208V (L6-20R)
	SYH2K6RMT-P1, SYH4K6RMT-P1, SYH6K6RMT-P1	208V	120/208V (L6-20R, 5-15R)
	SYA8K16RMP, SYA12P16RMP, SYA14K16RMP Requires APC SYPD7 and AAP87600 PDU	208V	120/208V (L6-20R, L6-30R)
Japan	SYH2K6RMJ, SYH4K6RMJ, SYH6K6RMJ Requires AAP87600 PDU with B50175F power cord	200V	200V (L6-20R)
	SYH2K6RMJ-P1, SYH4K6RMJ-P1, SYH6K6RMJ-P1	200V	100/200V (L6-20R, 5-15R)
	SYA8K16RMJ, SYA2K16RMJ, SYA16K16RMJ Requires APC SYPD7 and AAP87600 PDU	200V	100/200V (L6-20R, L6-30R)
Rest of the world	SYH2K6RMI, SYH4K6RMI, SYH6K6RMI Requires AAP87600 PDU with B52700F power cord	230V	230V (C20, C19)
	SYA8K16RMP, SYA12P16RMP, SYA14K16RMP Requires AAP87600 PDU with B52700F power cord	230V	230V (C20, C19)

Table 2-10. APC UPS Models for a Single Rack-Mountable System

Locale	Smart-UPS	UPS Input	AC Power Output
North America	Model SUA1500RM2U	120V	120V (5-15R)
Japan	Model SUA1500RMJ2UB	100V	100V (5-15R)
Rest of the world	Model SUA1500RMI2U	230V	230V (C14, C13)

Communicating with a UPS over a Network

Use the following additional tools to enable a UPS and an ftServer system that runs the Windows operating system to communicate over the network:

- APC Network Management Card EX (APC part number AP9617)

An APC Network Management Card EX is a standard component of the Symmetra UPS, but you must purchase the network card for the APC Smart-UPS.

- APC PowerChute® Network Shutdown for the ftServer system

When you install your ftServer system, download PowerChute Network Shutdown from APC, and install and configure the tool on the system, as described in the *Stratus ftServer System Software: Installation and Configuration for Windows Systems (R002W)*. PowerChute Network Shutdown monitors the UPS for an imminent power loss, and initiates a shutdown of the system before power is lost.


Connecting Power to Systems, PDUs, and a UPS

When you plan for PDUs and a UPS, note the following:

- Only the top PDU is connected to the UPS.
- The bottom PDU is connected directly to an AC power main.
- The UPS can be connected to the same AC power main that the bottom PDU is connected to, or the UPS can be connected to another AC power main.

[Figure 2-3](#) shows how to connect rack-mounted systems to PDUs and the PDUs to UPS units.

Figure 2-3. Power Cord Connections for Systems, PDUs, and a UPS

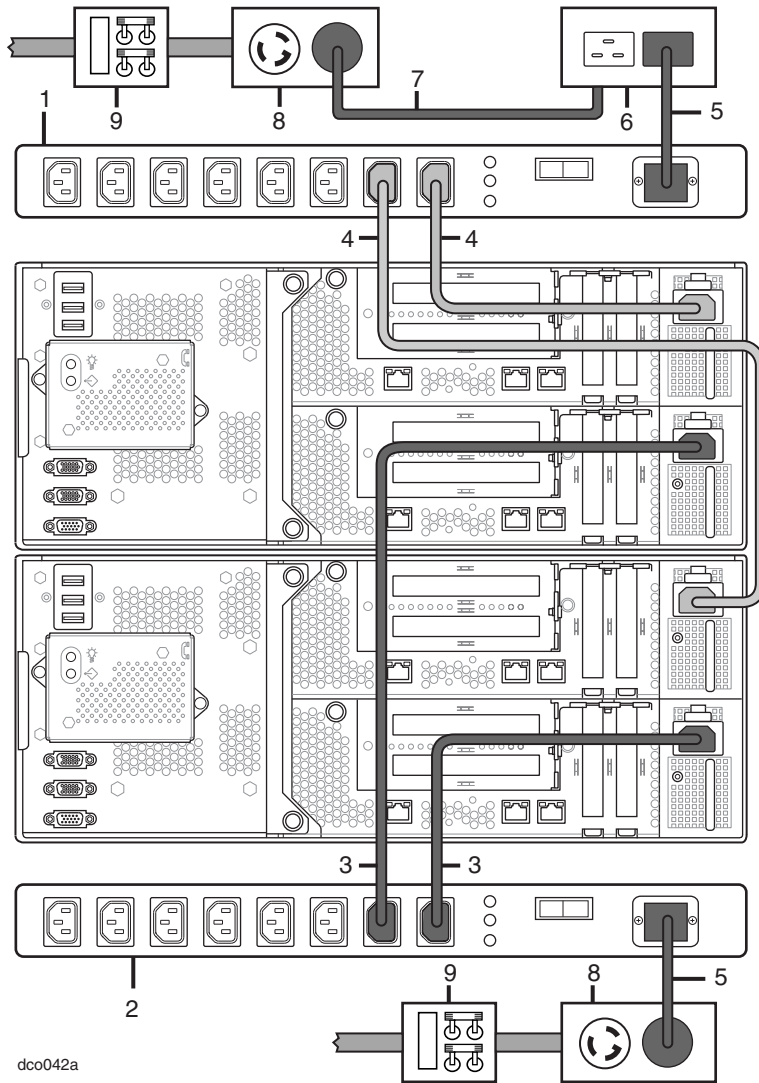


dco042a

- | | | | |
|---|------------------------------------|---|----------------------------------------------------------------|
| 1 | A-side PDU | 6 | UPS |
| 2 | B-side PDU | 7 | UPS power cord |
| 3 | B-side system power cables (black) | 8 | AC power outlets |
| 4 | A-side system power cables (gray) | 9 | AC power (mains) distribution circuit breaker (maximum of 20A) |
| 5 | PDU power cords | | |

Connecting a System Directly to a UPS

You can connect the A-side power connectors of your system directly to a UPS, as shown in [Figure 2-4](#).

Figure 2-4. Rack-Mountable Systems: A-Side Power Connected Directly to a UPS

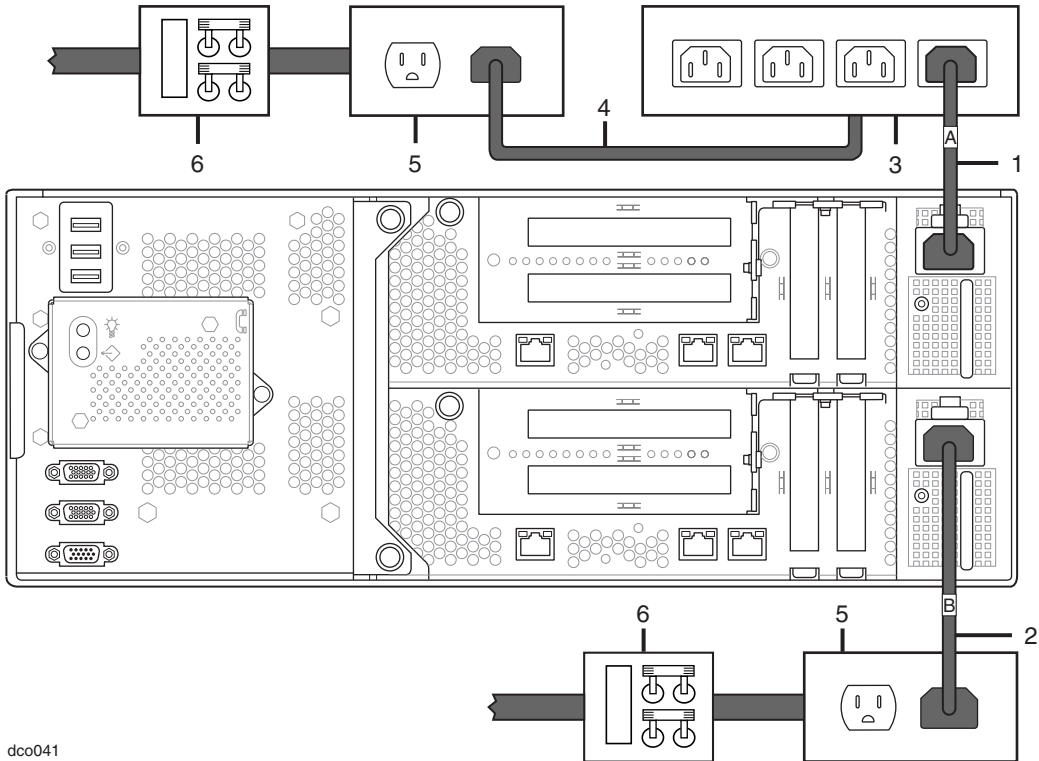

dco041

- 1 A-side system power cord
- 2 B-side system power cord
- 3 UPS
- 4 UPS power cord
- 5 AC power outlets
- 6 Circuit breakers (maximum of 20A)

Power Cord Summary

Stratus supplies tested and approved AC power cords for the following components:

- [ftServer systems and peripheral components](#)
- [PDUs](#)



WARNING

Place all power cords out of the way of foot traffic.

Power cords described as Domestic are made with American Wire Gauge (AWG) cordage and are intended for use in North America. Refer to UL 62 and CSA C22.2, No. 49. All other power cords are made with International cordage and are intended for use in the specified countries, and other countries that use that standard.

Power Cords for ftServer Systems and Peripheral Components

[Table 2-11](#) lists the available power cords that connect ftServer systems and peripheral components directly to an AC power source (not to a PDU or to a UPS).

[Table 2-12](#) lists the available power cords that connect ftServer systems to [qualified UPS models](#) from APC.

Table 2-11. Power Cords - ftServer Systems and Peripheral Components to AC Power

Marketing ID	Plug Type	Rating	Length	Locale
B50101F	NEMA 5-15, UL/CSA approved	15A/127V	7 ft	North America (Domestic)
B50104F	NEMA 5-15, UL/CSA approved	15A/127V	15 ft	North America (Domestic)
B50112F	CEE 7 VII	16A/250V	4.5m	Europe (Continental)
B50116F	BS 1363/A,	13A/250V	4.5m	United Kingdom
B50124F	AS/NZS 3112:1993	10A/250V	4.5m	Australia
B50140F	SEV 1011-S24507	10A/250V	4.5m	Switzerland
B50152F	SABS164-1:1992 ZA/3	13A/250V	4.5m	South Africa/India
B50153F	IEC 60309, TUV approved	16A/250V	4.5m	International, locking power cord
B50160F	NEMA 5-15, PSE approved	15A/127V	15 ft	Japan (100V applications)

Table 2-11. Power Cords - ftServer Systems and Peripheral Components to AC Power (Continued)

Marketing ID	Plug Type	Rating	Length	Locale
B50161F	NEMA L6-20	20A/250V	15 ft	North America locking power cord
B50162F	GB1002-1996, CCC approved	10A/250V	4.5m	China
B50173F	NEMA 5-15, BSMI approved	10A/125V	4.5m	Taiwan
B50174-P	L6-20P, PSE approved	15A/250V	15 ft	Japan locking power cord (200V applications)

Table 2-12. Power Cords Between ftServer Systems or Storage Systems and a UPS

Marketing ID	Plug Types	Rating	Length	Locale
B50104F-15	NEMA 5-15 to IEC 60320 C13	16A/120V	15 ft	North America
B50160F	NEMA 5-15 to IEC 60320 C13	15A/127V	15 ft	Japan
B50161F-45M	NEMA L6-20 to IEC 60320 C13	20A/250V	15 ft	North America locking power cord
B50301F-45M	IEC 60320 C14 to IEC 60320 C13	10A/250V	4.5m	International
B50174-P	L6-20P, PSE approved	15A/250V	15 ft	Japan locking power cord (200V applications)

PDU Power Cords

The PDU supplies power to ftServer systems. [Table 2-13](#) lists the available power cords that connect PDUs directly to an AC power source.

[Table 2-14](#) lists the available power cords that connect PDUs to a UPS.

[Table 2-15](#) describes the gray and black power (*jumper*) cables that are provided to connect ftServer systems to PDUs.

Table 2-13. Power Cords to Connect PDUs Directly to AC Power Mains

Marketing ID	Plug Type	Rating	Length	Locale
B50154F	IEC 60320 C19 to IEC 60309	20A/250V	15 ft	International
B50171F	IEC 60320 C19 to NEMA L6-20P	16A/250V	15 ft	North America
B50175F	IEC 60320 C19 to NEMA L6-20P, PSE approved	20A/250V	15 ft	Japan locking power cord

Table 2-14. AC Power Cords to Connect PDUs to a UPS

Marketing ID	Plug Type	Rating	Length	Locale
B50171F	IEC 60320 C19 to NEMA L6-20P	16A/250V	15 ft	North America
B52700F-45M	IEC 60320 C19 to IEC 60320 -C20	20A/250V	4.5m	International
B50175F	IEC 60320 C19 to NEMA L6-20P, PSE approved	20A/250V	15 ft	Japan locking power cord

Table 2-15. System Power (*Jumper*) Cables to Connect ftServer Systems to PDUs

Marketing ID	Plug Type to System	Plug Type to PDU	Rating	Length
B50502F	IEC 60320 C13	IEC 60320 C14	10A/250V	2.0m
B50503F	IEC 60320 C13	IEC 60320 C14	10A/250V	2.0m

Grounding Requirements



WARNING

Incorrect grounding can cause severe personal injury and extensive equipment damage.

The ftServer system obtains its protective earth (PE) ground through the power cord.

See “[Grounding Considerations](#)” on page B-1 for a more complete discussion of ftServer system grounding.

Chapter 3

Space Planning

For information about planning sufficient space for your ftServer system, see:

- [“Room Requirements” on page 3-1](#)
- [“Planning for Cables” on page 3-3](#)

Room Requirements

To ensure that the installation site provides a properly equipped, cooled, and sized environment, make sure that the site:

- Provides clearances for air circulation, opening cabinet doors, removing cabinet panels, and servicing the system from the front and rear.

Locate the front and rear of the system at least 2.5 feet (ft) (0.76 meters (m)) away from walls and other obstructions.

- Maintains reasonable temperature and humidity levels and has a thermometer and humidistat to monitor room temperature and humidity.

See [Chapter 2, “Electrical Power Planning”](#) for detailed information about HVAC planning.

- Is as free of dust as possible, meeting, at a minimum, ISO 14644-1 class 8 standards for a clean-room environment.

Dust buildup in the system can impede air circulation and heat transfer, causing components to become less reliable as the ambient temperature rises.

Fans clogged by dust fail to expel hot air, causing circuit boards to overheat and fail.

Dust on circuit boards raises the temperature, thus reducing the component's mean time between failure (MTBF).

Dust circulating in the room increases the risk of fire within the room by providing potential combustible material within the environment.

Dust contamination on tape devices causes mis-reads and -writes, leading to failure of attempts to back up and restore data.

- Has sufficient floor space for external components.
- Provides a table or desktop for external devices such as a telephone, external monitor, keyboard, and mouse.

Each of these devices requires table or rack space.



CAUTION _____

You **cannot** place a peripheral component on top of a system cabinet.

- Allows the system and peripheral devices to be placed within the room so that power cords and communications cables will reach their respective power receptacles, telephone jacks, and other connection points.
- Provides communications cable connectors or patch panels as needed.
- Provides two electrically separate grounded AC wall outlets, within reach of the power cords from the system or PDUs, and, if used, UPS units. Detachable power cords are 12 ft. (3.65m). If the power cord must be hard-wired, consult an electrician to plan the length of the power cord.
- Provides grounded AC wall outlets for external components that do not connect to a PDU.
- Provides cutouts in the floor for routing cables, if the site has an elevated floor.
- Contains space for future expansion.



CAUTION _____

Do not place the system in an area of high electrostatic discharge. Static electricity may damage components. Do not locate components near transformers or other electromagnetic devices.

See [Appendix A, “System Specifications”](#) and *Stratus ftServer Systems: Peripherals Site Planning Guide (R582)* for the dimensions of system components.

Planning for Cables

To accommodate cables from your system, make sure to provide:

- One or two telephone lines:
 - One telephone line for use when calling for service
 - One telephone line for the ASN modem, if used
- Ethernet jacks, switches, or hubs, as needed
- Two electrically separate grounded AC wall outlets, or a UPS and a wall outlet, within reach of the power cords from the system or PDUs, and additional outlets for any components that do not connect to a PDU
- For optional components, AC wall outlets within reach of the power cords from the components, or use PDUs

Make sure that cables you plan to connect to the system are long enough to reach between the system and external components or connections. For information about specific cables and power cords, see the following:

- [“Power Cord Summary” on page 2-13](#)
- [Chapter 4, “Communications Line Planning”](#)
- [“Monitor Requirements” on page 6-5](#)
- *Stratus ftServer Systems: Peripherals Site Planning Guide (R582)* for information about cable lengths for peripheral components

Chapter 4

Communications Line Planning

Make sure that you plan the locations of your ftServer system and its external components so that all communications and data cables will reach their connection points.

This chapter contains the following sections:

- “External SAS Connections” on page 4-2
- “Fibre Channel Connections” on page 4-2
- “Ethernet Cables” on page 4-5
- “iSCSI Connections (VMware Systems)” on page 4-7
- “Telephone Line Connections” on page 4-8
- “Site Planning for Systems in an ftGateway Group” on page 4-9

NOTES

1. Software upgrade services are available from [Stratus Professional Services](#). For a list of available services, see <http://www.stratus.com/services/ps/offerings.htm>.
2. If you have a unique network requirement, contact [Stratus Professional Services](#). For a list of available services, see <http://www.stratus.com/services/ps/offerings.htm>.
3. See the *Stratus ftServer Systems: PCI Adapter Guide* (R461) for more information about the adapters Stratus supplies for your ftServer system.

External SAS Connections

ftServer systems running the Linux or Windows operating system support U106 Eight-Port SAS PCI-Express Adapters for connection to tape drives. You must provide your own serial attached SCSI (SAS) tape drive(s) and SAS cable(s).

Fibre Channel Connections

ftServer systems support connections to ftScalable Storage systems and EMC CLARiiON and Symmetrix storage systems. Optical Fibre-Channel host bus adapters (HBAs) in the CPU- I/O enclosures provide connection points to these storage enclosures.

For ftServer systems running ftSSS for the Windows Operating System and ftSSS for the Linux Operating System, the following connection options are available:

- Directly attach the Fibre Channel cables between one or two ftServer systems and the RAID controller trays of an ftScalable Storage system
- For Windows systems only, connect the Fibre Channel cables from one or two ftServer systems directly to an EMC storage system
- Connect multiple ftServer systems to ftScalable Storage systems through a storage area network (SAN)
- Connect up to six ftServer systems to EMC storage systems through a SAN

For ftServer systems running ftSSS for VMware vSphere, the following connection options are available:

- Directly attach the Fibre Channel cables between a single ftServer system and the RAID controller trays of an ftScalable Storage system
- Connect multiple ftServer systems to ftScalable Storage systems through a storage area network (SAN)
- Connect up to six ftServer systems to EMC storage systems through a SAN

A pair of Fibre Channel HBAs is teamed for fault tolerance. The adapters are single-ported and each member of the pair is installed in a different CPU- I/O enclosure: one in the top enclosure and the other in the bottom enclosure. The *Stratus ftServer Systems: Peripherals Site Planning Guide* (R582) lists the optical Fibre Channel HBAs supported by each operating system.

Table 4-1 lists the available optical Fibre Channel cables.

Table 4-1. Optical Fibre Channel Cables

Length	Part number
6.5 ft (2m)	AW-B90000-020
32.8 ft (10m)	AW-B90000-100
98.4 ft (30m)	AW-B90000-300

For detailed instructions about making the Fibre Channel connections, see one of the following:

- The *ftScalable Storage: Getting Started Guide* (R601), where you can also see an illustration of multiple ftServer systems connected to an ftScalable Storage controller tray (that configuration is not shown here)
- The documentation for your EMC storage system

The following illustrations are provided to help you plan a site for ftServer systems and storage enclosures.

- [Figure 4-1](#) illustrates Fibre Channel connections from a single system to a switch, and from the switch to the ftScalable Storage controller tray. Connections to EMC storage systems through a SAN are similar.
- [Figure 4-2](#) illustrates Fibre Channel connections directly between an ftServer system and an ftScalable Storage controller tray. Direct connections to an EMC storage system are similar.

